



Operation


Compatible with Presta valves only. Valve core must be installed for pump to function correctly.

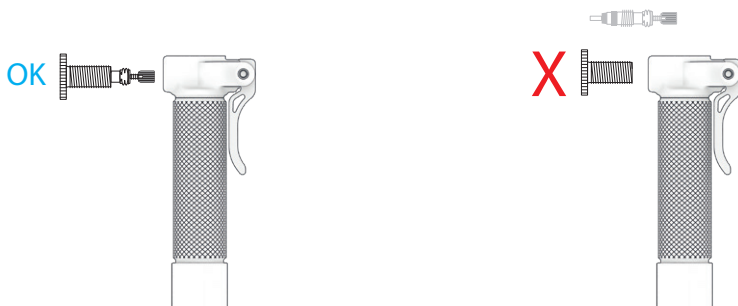

1 Insert

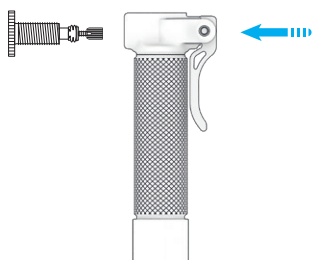


2 Engage

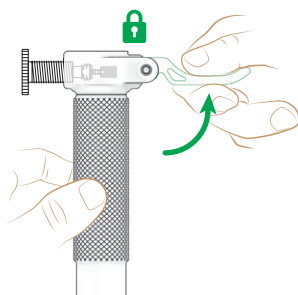


Firmly insert Presta valve into pump head and hold pump securely when engaging and releasing lever to avoid damaging the valve.

3 Inflate

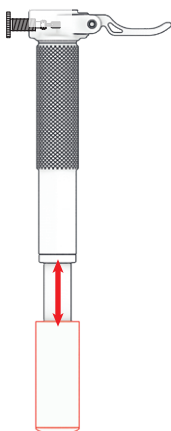

4 Disengage

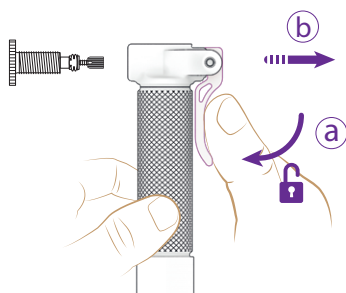

More Information

For more information on Lezyne products, visit: www.lezyne.com

CORPORATE HQ
Lezyne USA, Inc.
5470 Kietzke Lane, Suite 300
Reno, NV 89511

CALIFORNIA OFFICE
Lezyne USA, Inc.
645 Tank Farm Rd., Suite F,
San Luis Obispo, California
93401

TAIWAN BRANCH / MANUFACTURER
Lezyne USA, Inc. - Taiwan Branch
No.162, Shigu Lane
Guozhong Road, Dali District
Taichung City 412, Taiwan, ROC

EU SINGLE POINT OF CONTACT
Lezyne Europe GmbH
Rolandstrasse 4
14129 Berlin, Germany

For all inquiries, contact: support@lezyne.com