


FIDLOCK.

TWIST  
essential bag

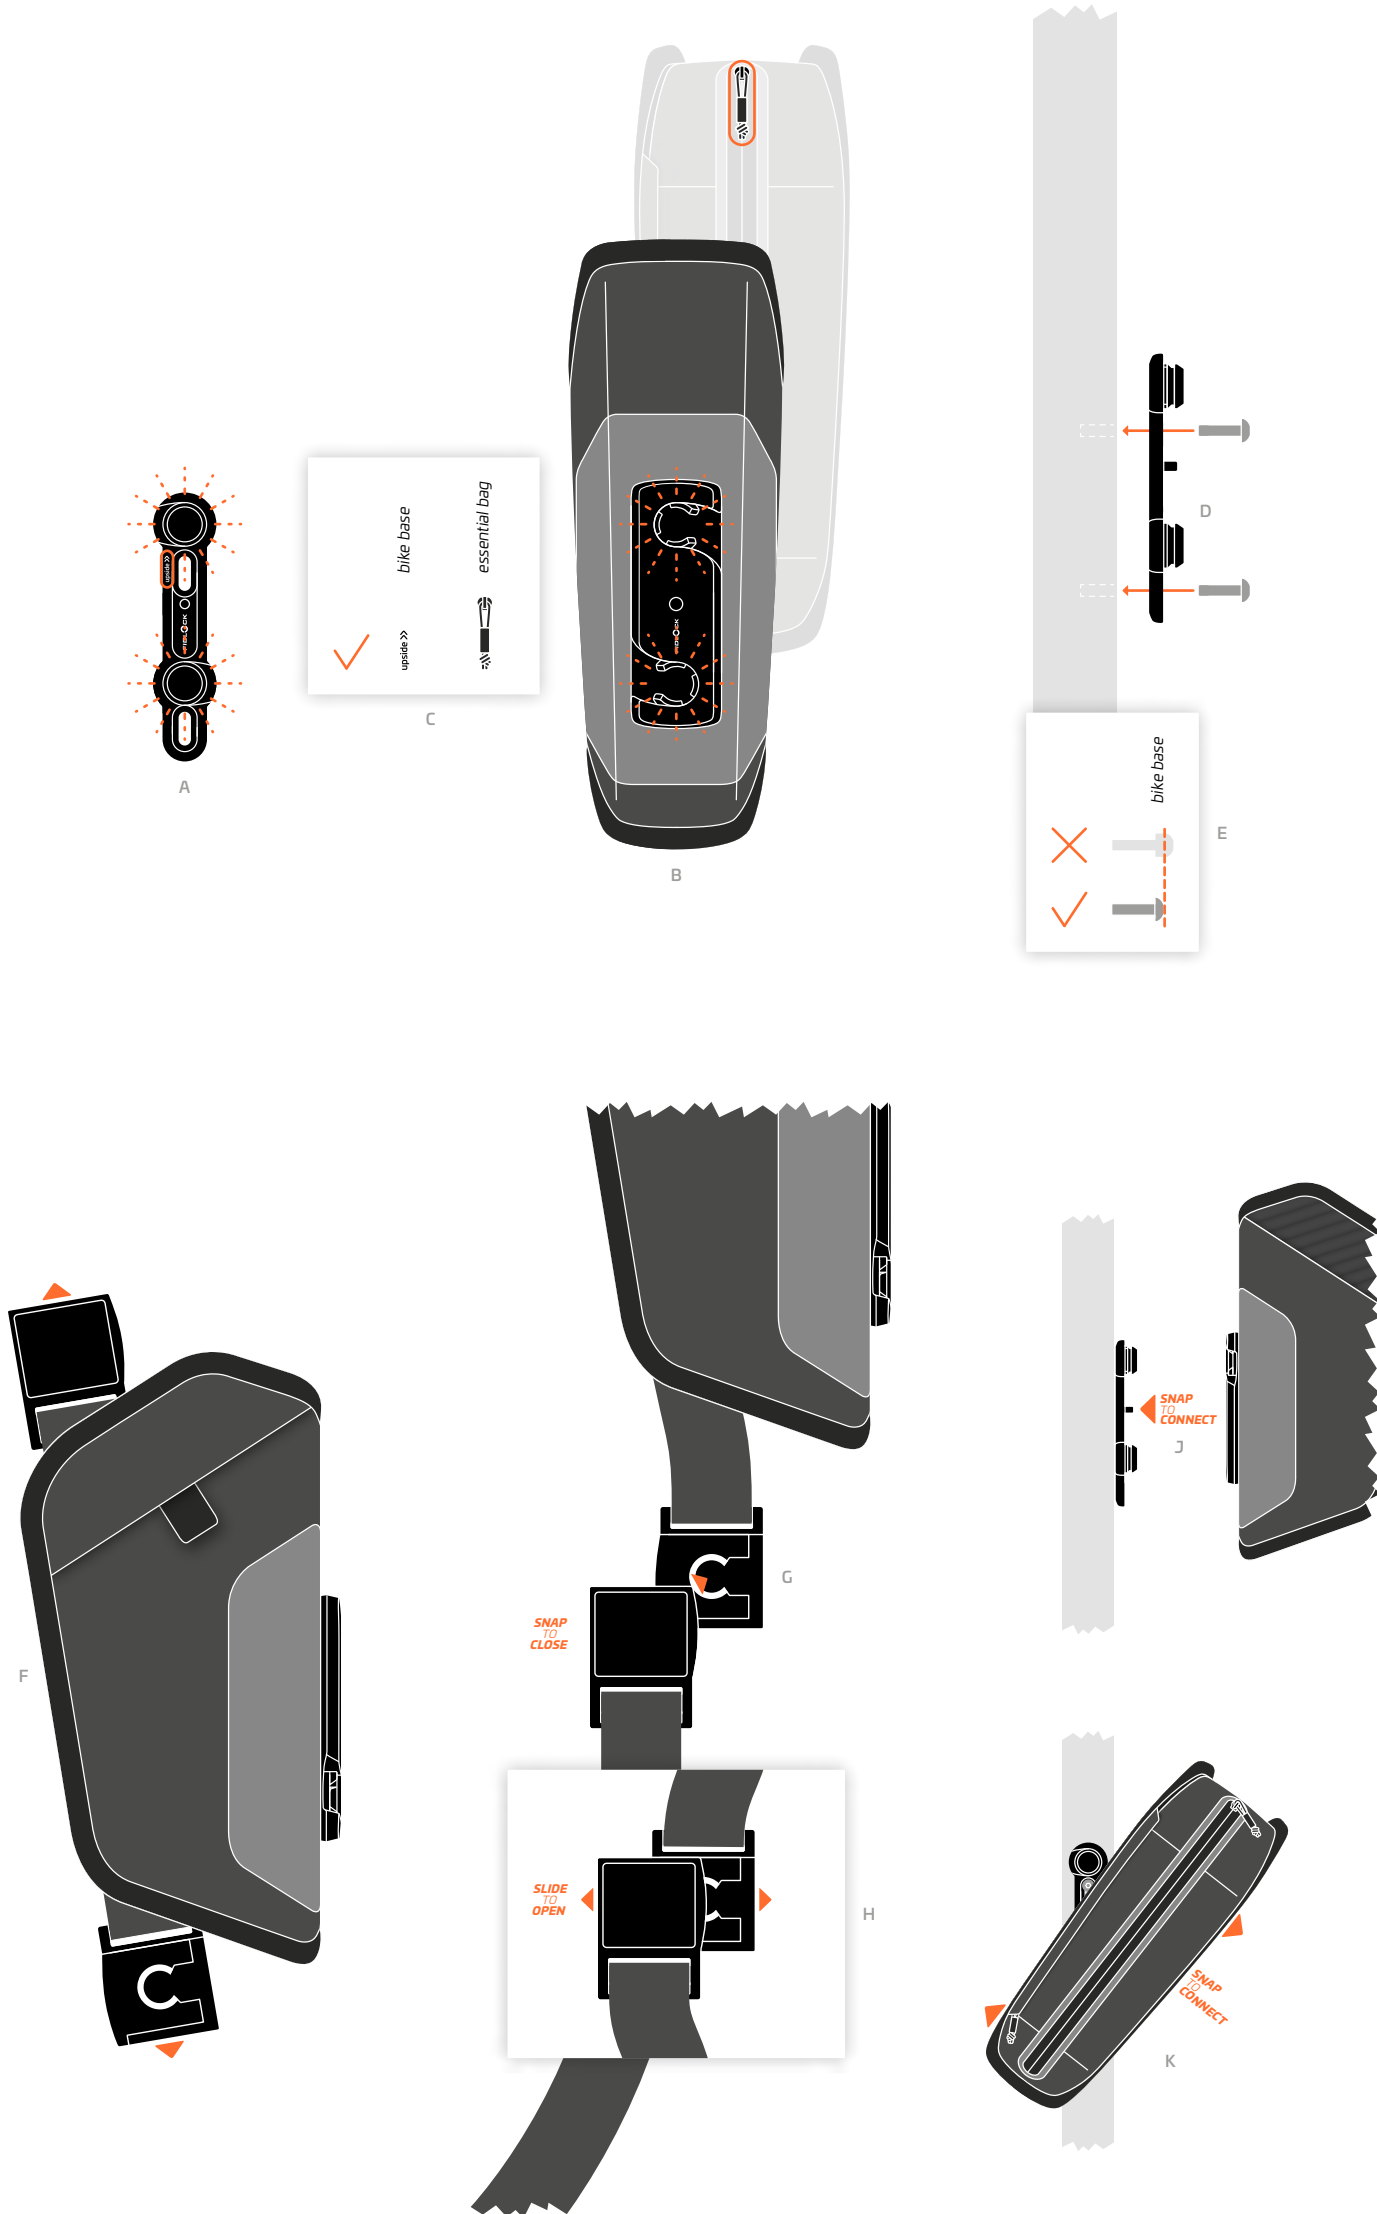

EN

Please read these instructions carefully before assembly and first use and keep them for later use!

◦ SAFETY INFORMATION

TWIST is a magnetic-mechanical mounting system consisting of base (Fig. A) and connector (Fig. B). The TWIST essential bag and TWIST bike base may only be used in conjunction with the original TWIST products intended for this purpose. Otherwise mechanical engagement would not be possible. **Attention: Not suitable for downhill (e.g. descents at over 60 km/h)!** The TWIST essential bag and TWIST bike base are not dishwasher or microwave safe! Please use only clear water and a soft cloth for cleaning. Before each use, check that the TWIST essential bag is properly engaged and the TWIST bike base is free of dirt! If you discover defects of any kind, cease use immediately and contact your retailer! **Attention: For a secure hold, the maximum filling weight of 700g must not be exceeded!** Please protect your bag contents additionally in case of rain or high humidity! Waterproofness is not guaranteed. To avoid falls, make sure before each bike ride that the provided shoulder straps – which you will find in the side compartments of the TWIST essential bag – cannot get into the spokes or other moving parts of the bike. The neck strap is not intended to be worn around the neck. To avoid injury, wear the shoulder strap around your waist or over your shoulder for your own safety. Only allow children access to the TWIST essential bag under adult supervision.

◦ TECHNICAL DATA

Bag volume of TWIST essential bag M: 1100 ml  
Bag volume of TWIST essential bag L: 2400 ml  
Maximum filling weight: 700 g  
Material of bag: water-repellent EVA, PET, PA, PP, POM, PUE, steel, Manufactured in Vietnam  
Material of base/connector/SNAP buckle flat 25: PA66GF, PC-ABS, stainless steel, neodymium, epoxy, Manufactured in China

◦ ASSEMBLY

The TWIST bike base is mounted on the threaded bushings provided by the manufacturer on the down tube or seat tube of the bike frame (Fig. D). The TWIST essential bag is not intended for use on TWIST bike bases that are turned sideways to the direction of travel (e.g. on the fork)! When mounting, make sure that the arrows and the "up" mark on the TWIST bike base point upwards. With the TWIST essential bag, the slider of the closed zip must be visible from above (Fig. C). A tightening torque of 2 newton metres (Nm) is required for reliable attachment of the TWIST bike base to the bike. If vibrations occur while riding, the bag may come into contact with the bike frame. Use the frame protection sticker supplied to protect your bike from scratches.

**Note: Only use the screws supplied! Screws with a higher head mean that the TWIST essential bag is not firmly connected to the TWIST bike base and will come loose while riding (Fig. E). The TWIST system will become impaired in its function.** If you are unsure of how to assemble the product properly, consult your retailer for advice!

◦ USE

Before setting off, familiarise yourself with how the TWIST essential bag and TWIST bike base are handled and check that they are functioning properly. Confirm that the product has been assembled properly. To connect the TWIST essential bag to the bike, guide it to the TWIST bike base. Then let the TWIST essential bag snap onto the TWIST bike base (Fig. I). You will hear the "click" sound of the mechanical engagement. To release the TWIST essential bag from the TWIST bike base turn it clockwise until both magnets and the detent are released (Fig. J). When the TWIST essential bag is not being used on the bike, the integrated shoulder strap with the SNAP buckle flat 25 closure can be used for more comfortable carrying. Remove the two strap parts from the side compartments provided on both sides of the bag (Fig. F) and bring the two ends together so that the two parts of the magnetic SNAP buckle flat 25 engage with an audible "click" sound (Fig. G). Wear the shoulder strap over your shoulder or around your waist. To stow the neck strap, slide the SNAP buckle flat 25 apart (Fig. H) and put the webbing back into the compartments provided.

◦ INTENDED USE

The proper use of the TWIST essential bag and TWIST bike base is mounting and use on the bike frame on the threaded bushes provided by the manufacturer. The total weight of the bag contents must not exceed 700 g. Any other use is considered improper and is prohibited as it could lead to malfunctions, damage or injuries.

◦ DISPOSAL

The TWIST essential bag and TWIST bike base can be disposed of in household waste. Please observe the environmental regulations applicable in your country regarding disposal.

◦ LIABILITY

We have gone to great lengths to ensure that the operating instructions are correct, complete and as precise as possible. However, deviations cannot be entirely ruled out, and no liability can be accepted for errors in the provided operating instructions. We accept no liability for damage caused by failure to observe the instructions for use or by improper use. If the TWIST essential bag and the TWIST bike base are used improperly or for another purpose or are repaired by the user, no liability is accepted for any damages.

◦ LEGAL INFORMATION

This product is protected by one or more patents. For more information on the patent protection of the TWIST product range, please visit: [www.fidlock.com/patents](http://www.fidlock.com/patents)

See our website for more information: [www.fidlock.com/consumer](http://www.fidlock.com/consumer)

FIDLOCK GmbH, Kirchhorster Straße 39, 30659 Hanover, Germany, AG Hanover, HRB 204281, E-mail: [info-bike@fidlock.com](mailto:info-bike@fidlock.com)